


EUROTECH DESIGN[®]

APPLIANCES FOR LIVING

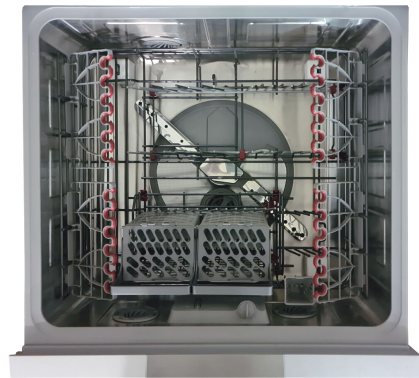

EUROTECH DESIGN RECOMMENDATIONS

To keep your dishwasher in great shape and your dishes coming out clean every time we have the following recommendations.

- Never stack your dishes or cutlery higher than the cutlery basket handle. (this can prevent the internal lid from sealing and cause damage)
- Ensure no items have fallen through the tray to prevent the spray arms from spinning.
- Don't use any abrasive materials to clean the stainless steel exterior.
- Use rinse aid with your wash to have your glasses come out spotless.
- Use a dishwasher cleaner once a month (if used heavily) to clear out any residual food particles or smells.

DON'T
FORGET TO
REFER TO
THE USER
MANUAL
BEFORE
USE.